


### Components

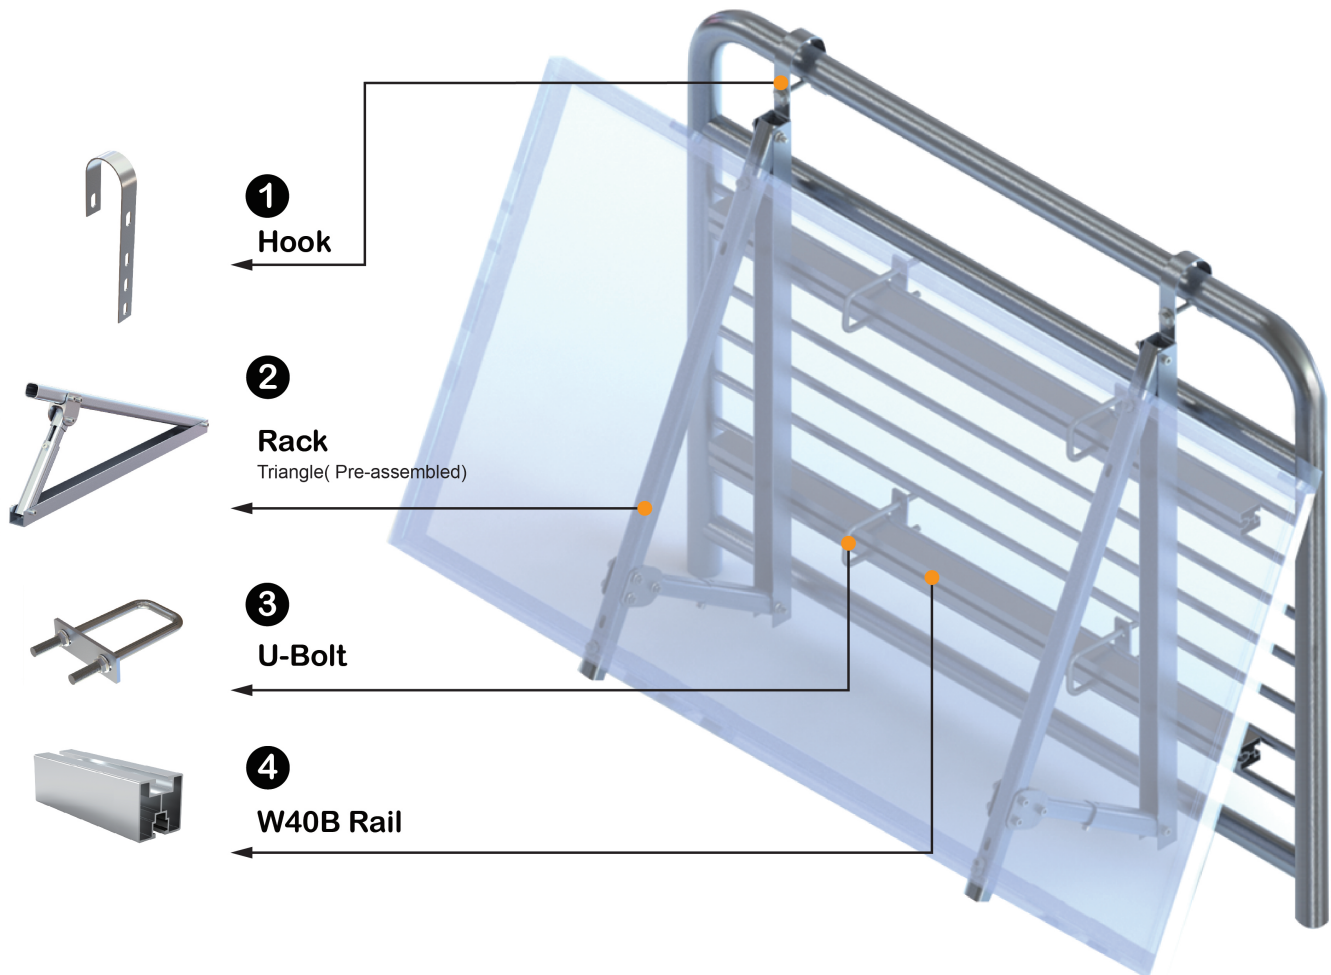

### Installation Tools



Wrench (M8,M10)



Marker



Tape measurement




Electrical drill




M8 Allen key


### Step 1 Installation-Hook

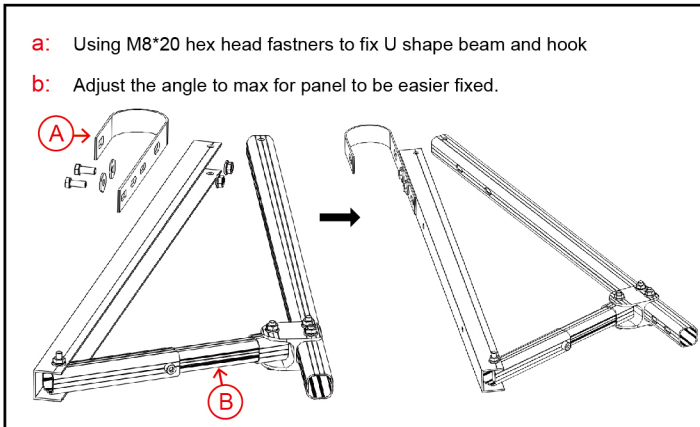


### Step 2 Installation- Triangle

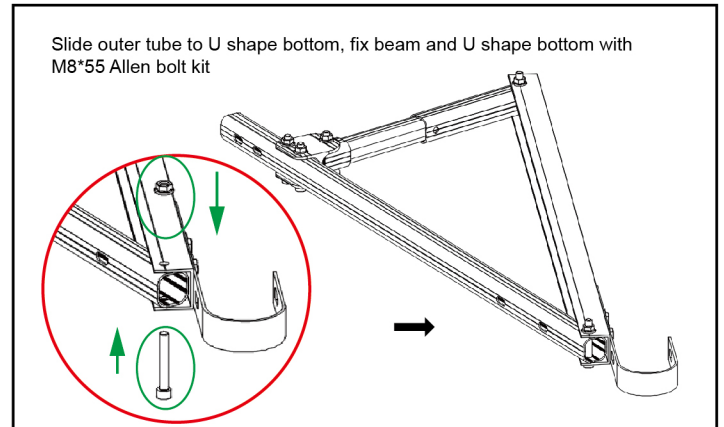


### Step 3 Installation-Rail

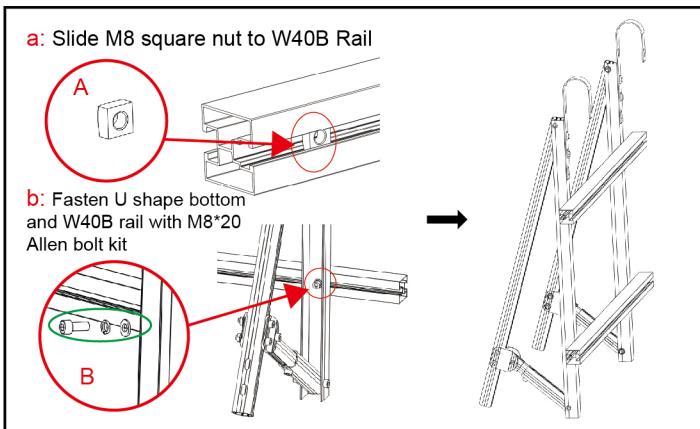

### Step 4 Installation-Panle

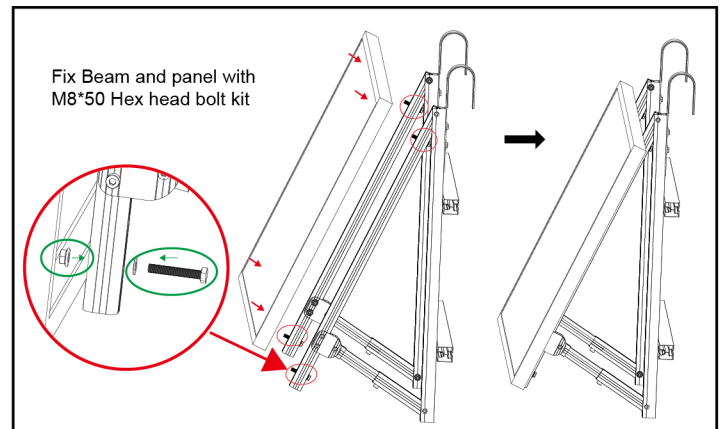

### Step 5 Vertical balcony

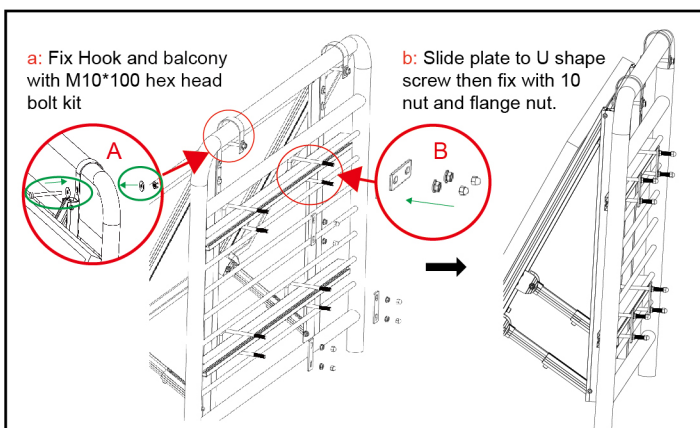

### Step 6 Installation-Completed

